

Texas Chainsaw Massacre Switch Chart

Texas Chainsaw Massacre Switch Chart

Switch Bank for Main Playfield								
Switch Bank 1			Switch Bank 2			Switch Bank 3		
0	NONE	Grey	8	Stand Up Bank Top	Grey	16	Middle Scoop	Grey
1	Trough 7	White	9	Post Lock	White	17	Left Sneakback	White
2	Trough 6	Red	10	Stand Up Bank Bottom	Red	18	Spinner	Red
3	Trough 5	Purple	11	Stand Up Bank Middle	Purple	19	Left Front Scoop	Purple
4	Trough 4	Blue	12	Right Sling	Blue	20	Sling Left	Blue
5	Trough 3	Green	13	Lower Right Flipper EOS	Green	21	Lower Left Flipper EOS	Green
6	Trough 2	Yellow	14	Right Inlane	Yellow	22	Left Inlane	Yellow
7	Shooter Lane	Orange	15	Right Outlane	Orange	23	Left Outlane	Orange
Ground	Ground	Black	Ground	Ground	Black	Ground	Ground	Black
Switch Bank 4								
Switch Bank 4			Switch Bank 5			Switch Bank 6 (Upper Board)		
24	Door Scoop	Grey	32	VUK	Grey	H 40	Post Lock Stack	Grey
25	Outer Orbit Left	White	33	Right Orbit	White	G 41	Lower Right Ramp Made	White
26	Back Left Standup	Red	34	Back Right Standup	Red	F 42	Middle Scoop Entry	Red
27	Upper Left Flipper EOS	Purple	35	Upper EOS	Purple	E 43	Orbit Divertor Detect	Purple
28	Middle Scoop Standup Bottom	Blue	36	Captive Ball	Blue	D 44	NONE	Blue
29	Drop Target	Green	37	NONE	Green	C 45	Lower Left Ramp Made	Green
30	Middle Scoop Standup Top	Yellow	38	NONE	Yellow	B 46	Upper Left Ramp Made	Yellow
31	NONE	Orange	39	NONE	Orange	A 47	Corkscrew Exit	Orange
Ground	Ground	Black	Ground	Ground	Black	Ground	Ground	Black
Switch Bank 7 (Lower Board)								
Switch Bank 7 (Lower Board)			Switch Bank 8			Upper Board (Cabinet Expander)		
H 48	Trough Jam	Grey	56	NONE	Grey		Power	NONE
G 49	Trough 1	White	57	NONE	White	80	Lower Right Flipper	Grey

F 50	Inner Right Orbit	Red	58	NONE	Red	81	Action	White
E 51	Door Entry	Purple	59	Spinning Toy Home	Purple	82	Upper Right Flipper	Red
D 52	Upper Right Ramp Made	Blue	60	Lock Enter	Blue	83	Upper Left Flipper	Purple
C 53	Divertor Corkscrew	Green	61	Lock Right	Green	84	Tilt	Blue
B 54	Inner Orbit Left	Yellow	62	Lock Center	Yellow	85	Launch	Green
A 55	Magnet	Orange	63	Lock Left	Orange	86	Lower Left Flipper Button	Yellow
Ground	Ground	Black	Ground	Ground	Black	87	Start	Orange
						Ground	Ground	Black
Lower Board (Cabinet Expander)			GI Bank 1			Servo Expander		
	Power	Yellow	8	NONE	Grey	0-9	NONE	
88	Start Light	Brown	7	NONE	White	10	Fridge/TNT	
89	Action Light	Brown	6	NONE	Red	11	Spinny Toy	
90	Coin left	Red	5	NONE	White	12	Back Board	
91	Enter	Purple	4	NONE	Grey	13	Grinder	
92	Down	Blue	3	NONE	NONE	14	Door	
93	Up	Green	2	GI	NONE			
94	Exit	Yellow	1	Apron Lights	NONE			
95	Cabinet Extra	Orange	Power	Power	Pink			
Ground	Ground	Black						