

The Evil Dead Switch Chart

Switch Bank for Main Playfield								
Switch Bank 1			Switch Bank 2			Switch Bank 3		
0	NONE	Grey	8	Trough 7	Grey	16	NONE	Grey
1	NONE	White	9	Trough 6	White	17	Lower PF EOS	White
2	NONE	Red	10	Trough 5	Red	18	Lower - Lock and Load	Red
3	NONE	Purple	11	Trough 4	Purple	19	Lower - Book Target	Purple
4	NONE	Blue	12	Trough 3	Blue	20	Sling Flipper EOS	Blue
5	NONE	Green	13	Trough 2	Green	21	Right Flipper EOS	Green
6	Topper Down	Yellow	14	Left Shooter Lane	Yellow	22	Right Inlane	Yellow
7	Spinner	Orange	15	Right Shooter Lane	Orange	23	Right Outlane	Orange
Ground	Ground	Black	Ground	Ground	Black	Ground	Ground	Black
Switch Bank 5								
Switch Bank 5			Switch Bank 6			Switch Bank 7		
32	Right VUK	Grey	40	Shotgun Right	Grey	48	Groovy Drop 4_O	Grey
33	Necklace Right	White	41	Shotgun Left	White	49	Groovy Drop 5_V	White
34	Necklace Center	Red	42	Left Deadite EOS	Red	50	Groovy Drop 6_Y	Red
35	Right Deadite Bash	Purple	43	Left Deadite Bash	Purple	51	Left Sling	Purple
36	Right Deadite EOS	Blue	44	Mouse Trap Target	Blue	52	Left Flipper EOS	Blue
37	Lift Bank Left	Green	45	Groovy Drop 1_G	Green	53	Left Inlane	Green
38	Lift Bank Middle	Yellow	46	Groovy Drop 2_R	Yellow	54	Left Midlane	Yellow
39	Lift Bank Right	Orange	47	Groovy Drop _O	Orange	55	Left Outlane	Orange
Ground	Ground	Black	Ground	Ground	Black	Ground	Ground	Black
Upper Board (Playfield Expander)			Lower Board			Upper Board		
64 H	Trough Jam	Grey	72 H	Power	Grey	80 H	5v Power	NONE
65 G	NONE	White	73 G	Left Ramp	White	80 H	Lower Right Flipper	Grey
66 F	Trough 1	Red	74 F	Rear Orbit Opto	Red	81 G	Action	White
67 E	Lower Playfield Loop	Purple	75 E	Left Orbit	Purple	82 F	Upper Right Flipper	Red

