

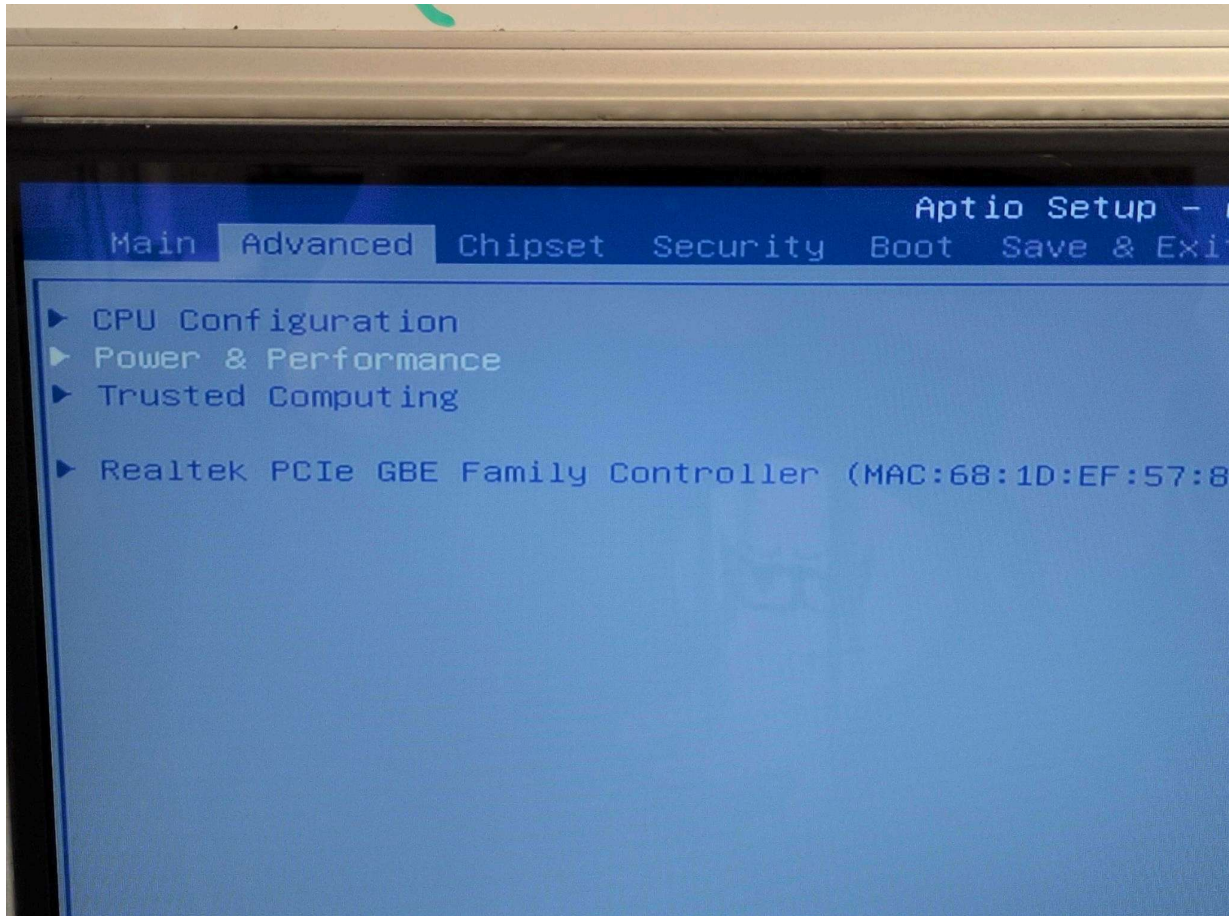



New PC bring up BIOS options

1. Attach a keyboard, display, and power to the PC
2. Press the power button on the PC to turn it on. *Immediately* After pressing the power button, repeatedly press the delete key on the keyboard until the BIOS screen appears on the display.
3. Not all computers have the option, but you can look for Advanced > Power & Performance > CPU > Turbo Mode. Set this to Enabled.

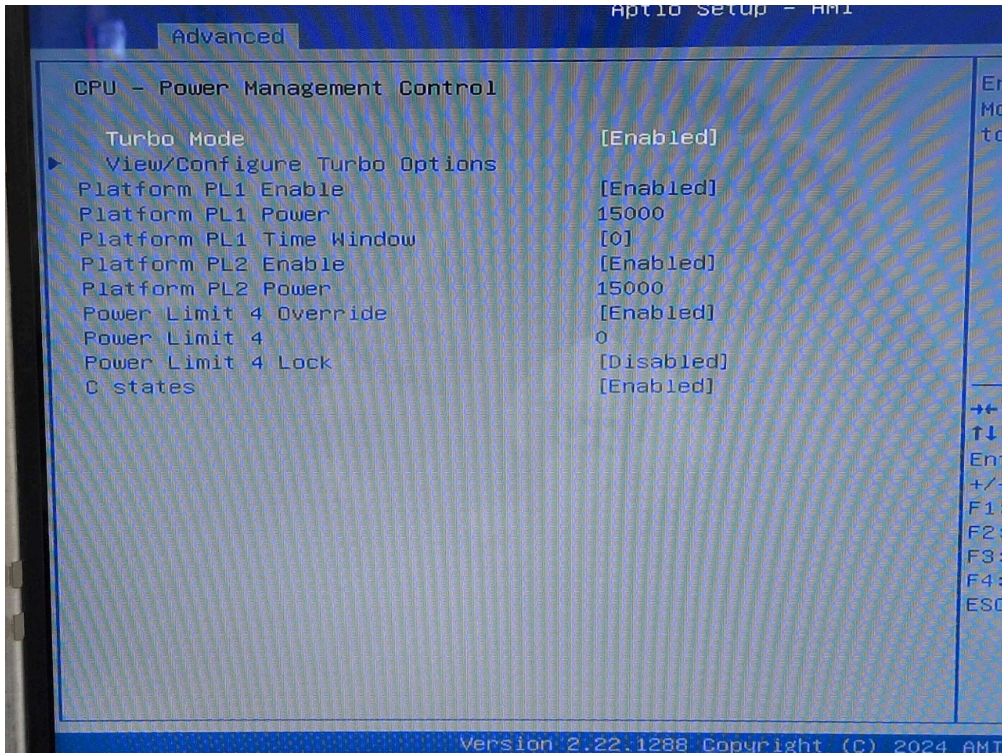


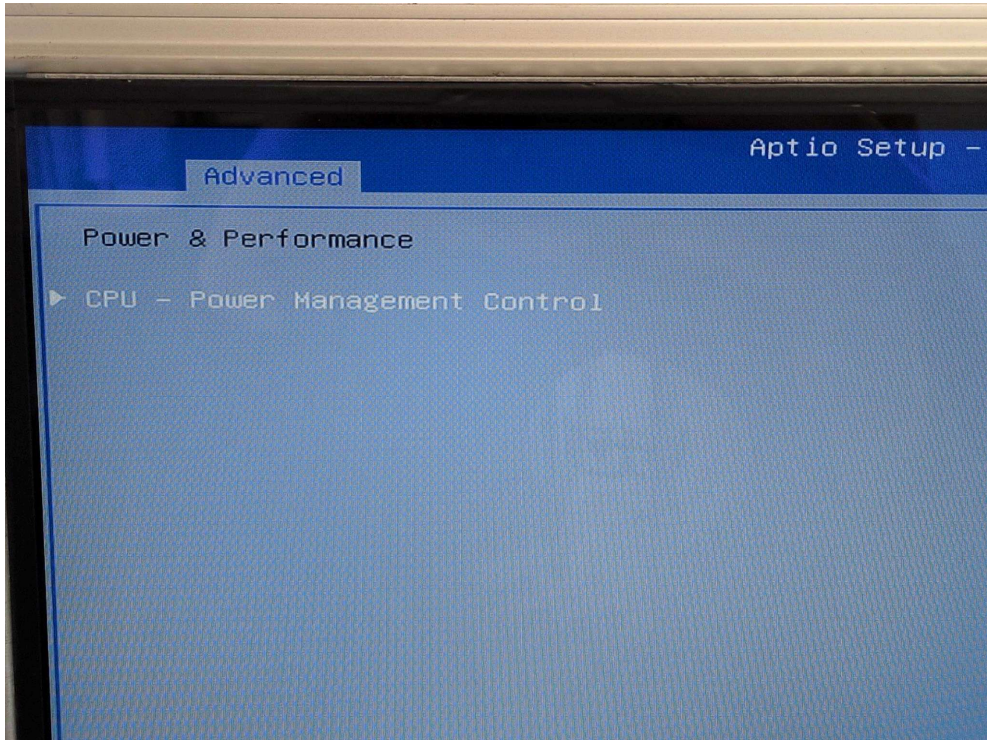

4. Navigate to the Boot tab.
5. Set the State after G3 setting to S0 State (This makes the PC boot when power is applied, instead of having to press the power button)

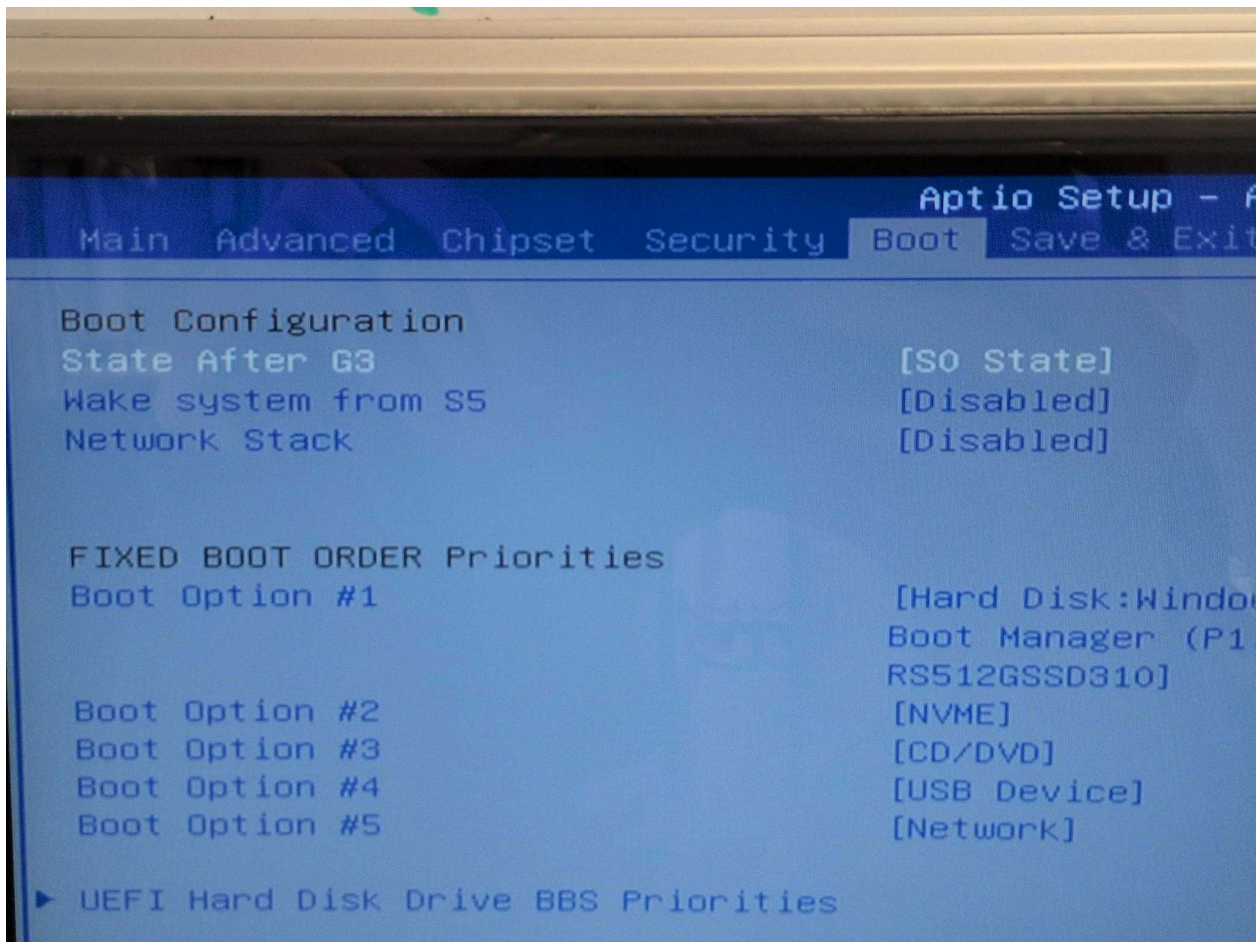

6. Set boot option #1 to USB Device

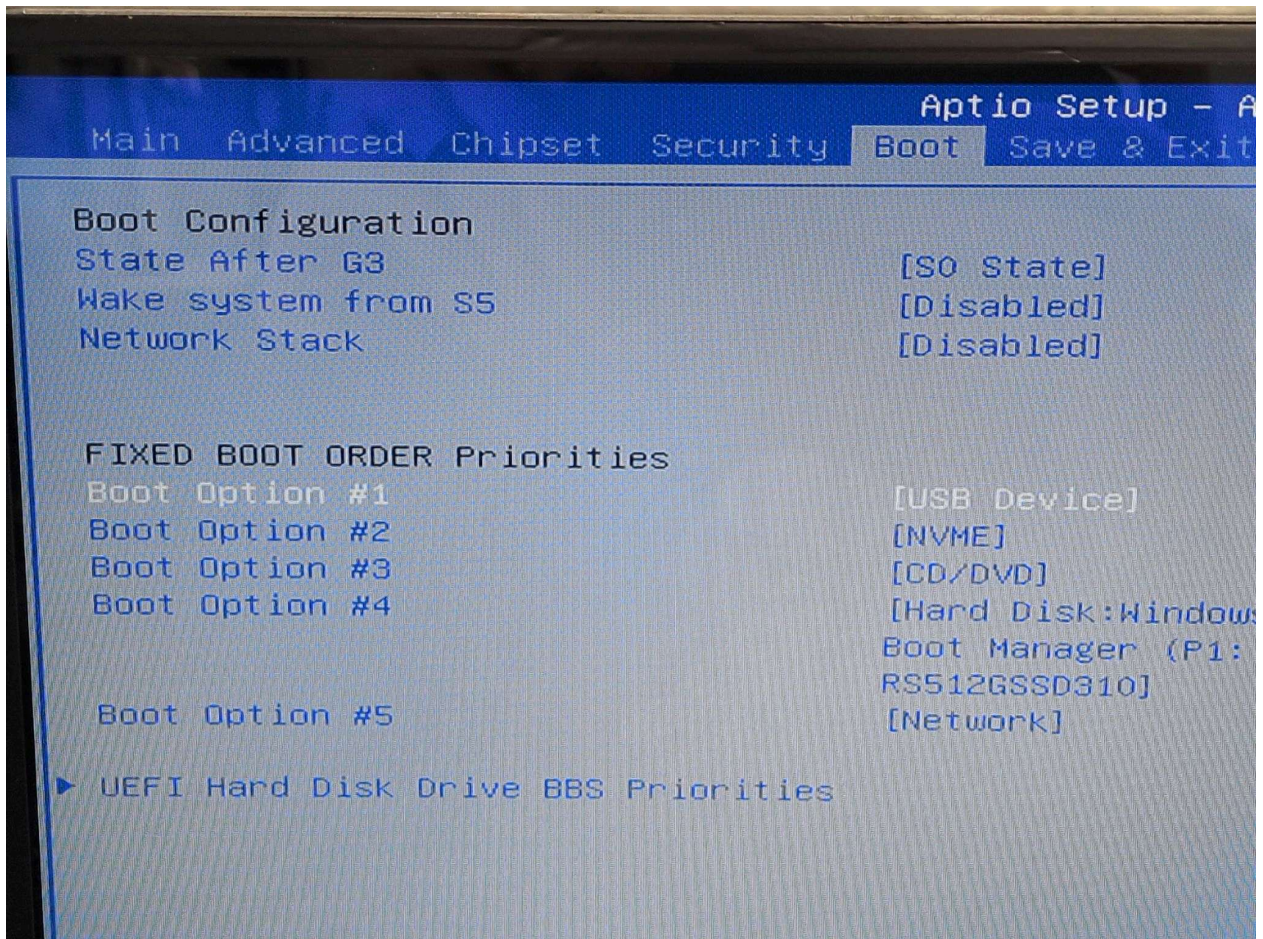

7. Go to Save & Exit > Save Changes and Exit

